

Horn Problems & Horn Troubleshooting Guide

Horn Problems

Horn does not work.

1. Open the battery cover and locate the horn. This is a round copper device that is mounted to the frame of the scooter and has 2 wires attached.
2. Ensure both wires are connected.
3. If both wires are connected and the horn still does not operate, the horn may be bad.
4. To test the horn itself, you can use 2 jumper wires and connect the horn directly to the positive and negative terminals of the battery. If it works with a direct connection, the switch is bad. Replace switch.

If you have any further questions about a problem you are having please click to open a [scooter technical support ticket](#).