

Blinker Problems & Blinker Troubleshooting Guide

Blinkers do not work.

1. Open the battery cover and locate the blinker module. This is a blue or black device that has 2 wires attached to it and is approximately 1 ½ inches tall.
2. Ensure both wires are connected.
3. If both wires are connected and the blinker still does not operate, module may be bad.
4. To test the module itself, leaving the module connected, you can attach two additional jumper wires to the back of the blinker module, and then to the appropriate positive and negative terminals of the batteries. If the signals begin to work while making direct contact to the battery, you may have faulty wiring between the switch and the module or a bad controller.

If you have any further questions about a problem you are having please click to open a [scooter technical support ticket](#).