

## Seat Height Problems & Adjustment Troubleshooting Guide

Seat post is too tall.

1. Cut seat post to desired height by using a hacks saw. Reinsert post and tighten clamp.

If you have any further questions about a problem you are having please click to open a [scooter technical support ticket](#).